

Matrox **Extio Series**

Extio F2208 • Extio F2408 • Extio F2408E Expander

Getting Started Guide

20123-G01-0130
FXTO2-AMN13E

www.matrox.com/graphics

matrox®
Graphics for Professionals

Matrox Extio Series

Thank you for purchasing a Matrox Extio product. This product is a complete remote graphics solution that supports up to two or four computer monitors at a time depending on your product. As a remote graphics solution, it separates the CPU and hard disks of your system from the computer peripherals – monitors, keyboard, mouse, and audio hardware.

Hardware required (sold separately)

To connect your Matrox product to your system, you need an LC-LC optical cable. For more information on the type of optical cable and distances supported, see “Hardware information” in your user guide.

More information

See the Matrox Web site (**www.matrox.com/graphics**) for the latest Matrox documentation, software, and product information.

Documentation

See your user guide for information on other installation and connection options. The user guide for your product is available on the Matrox Web site (**www.matrox.com/graphics/en/support/manuals**).

Matrox software

Matrox software is available for your Extio product on the Matrox Technical Support Web site (**www.matrox.com/graphics/support/drivers**).

For software information, see the Matrox PowerDesk help and *Readme* files. Be sure to check for any last-minute release notes included with your product.

Matrox Graphics Inc.
1055 Saint Regis Boulevard
Dorval, Quebec, Canada H9P 2T4

North America: 1-800-361-1408
International: (514) 822-6000

Email: **graphics@matrox.com**

Web site: **www.matrox.com/graphics**

Technical support:
www.matrox.com/graphics/support

To locate the sales office nearest you, visit
www.matrox.com/graphics/contact

matrox®
Graphics for Professionals

❶ Install and ❷ connect your interface card

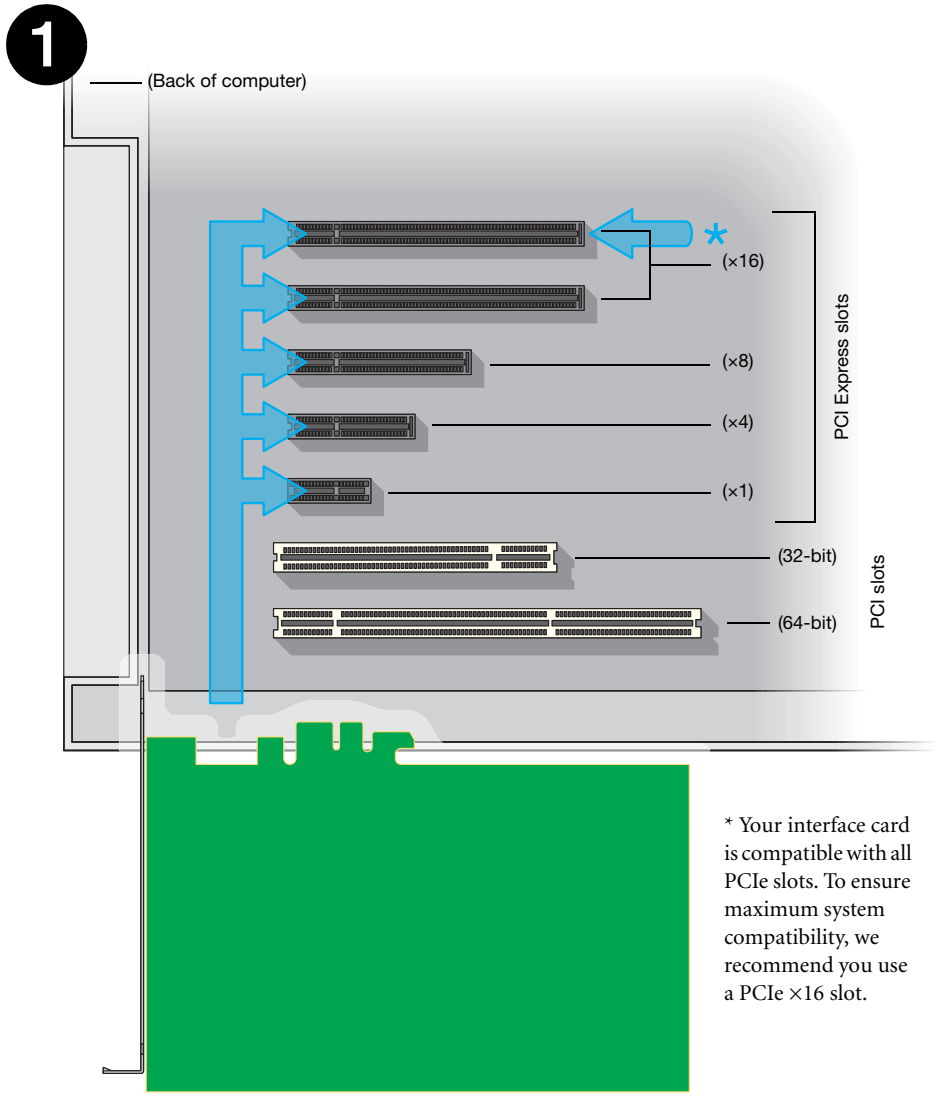

* Your interface card is compatible with all PCIe slots. To ensure maximum system compatibility, we recommend you use a PCIe ×16 slot.

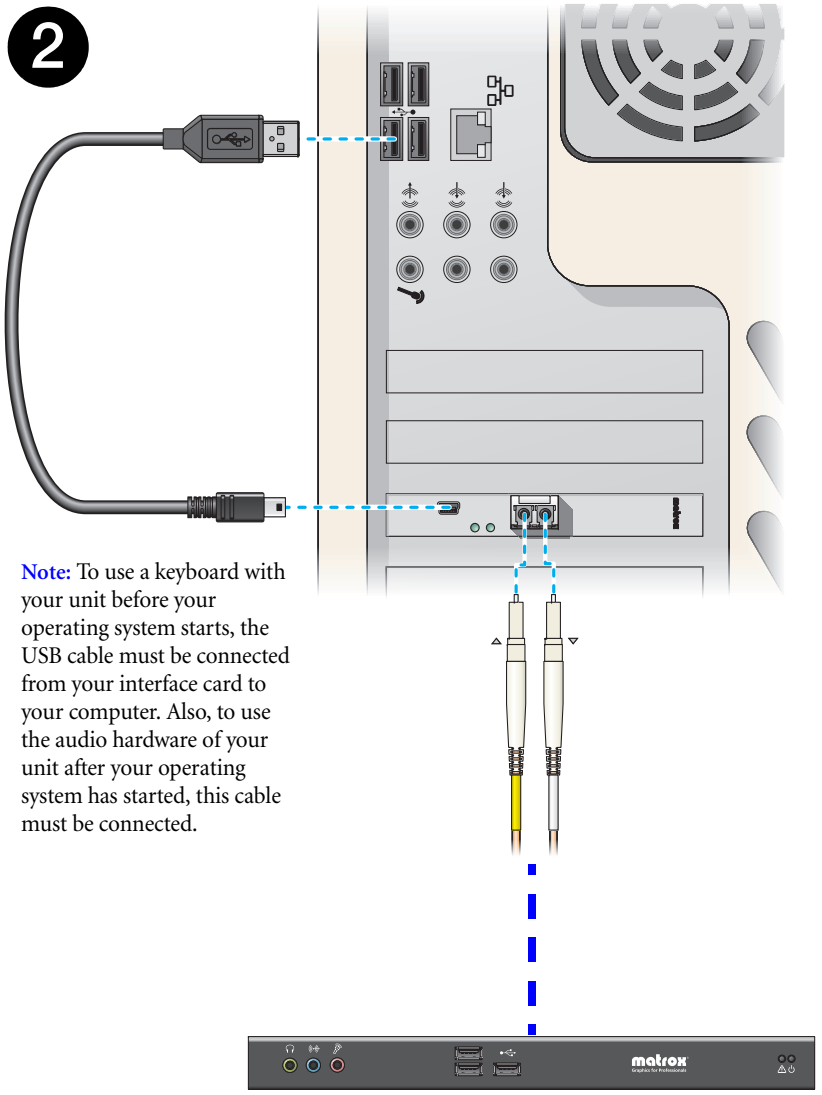

Note: To use a keyboard with your unit before your operating system starts, the USB cable must be connected from your interface card to your computer. Also, to use the audio hardware of your unit after your operating system has started, this cable must be connected.

Extio F2208/F2408

❸ Connect your Extio F2208 unit

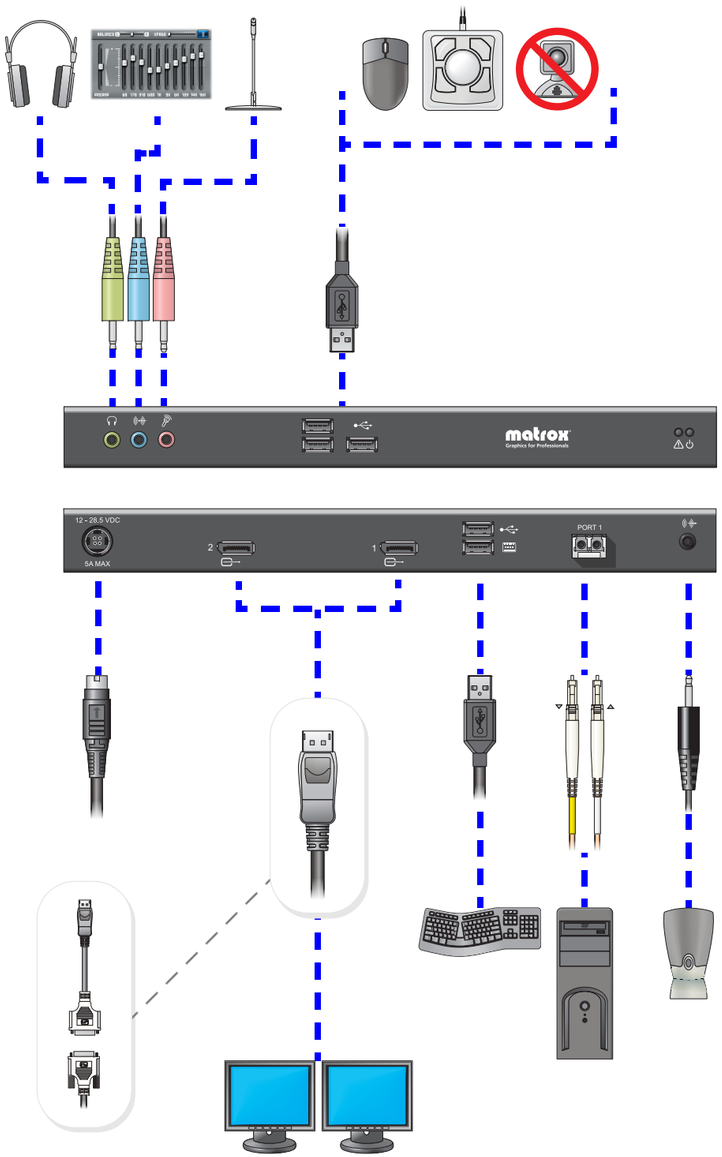

❸ Connect your Extio F2408 unit

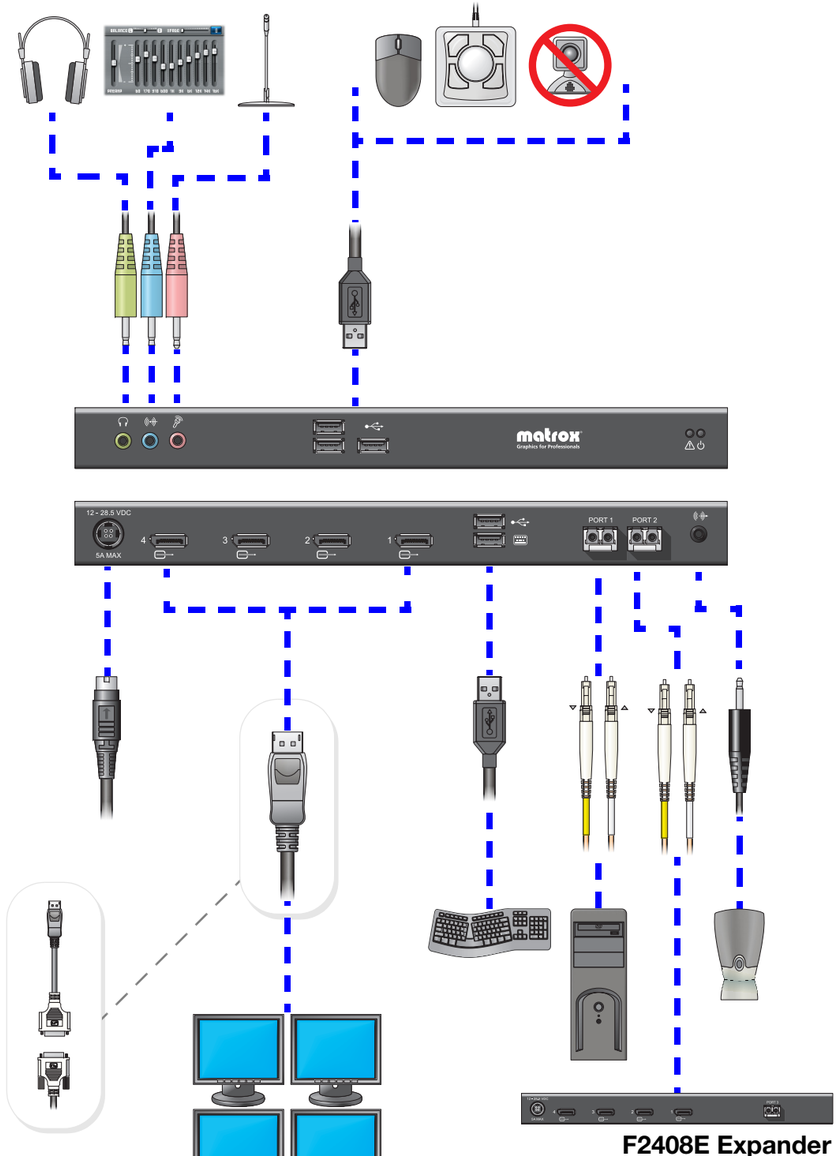

F2408E Expander

❹ Download and install your software
(www.matrox.com/graphics/support/drivers)

